



Antminer S17 Manual Download

Antminer S17 Manual Download

2020/4/20

Antminer S17 Hashboard repair guide manual download

This version contains the basic circuit schematic diagram and chip signal direction and voltage introduction

We currently publish in Chinese and the English version will be released soon

Basic overview:

Antminer S17 single hash board uses a total of 48 hash chips, the model is "BM1397AD", and the signal direction is sequentially transmitted from U1 to U48.


It also passes 5 test points for testing and maintenance

The five test points are: CLK-CO-RI-BO-RST


(Please note: The location of the test points in different voltage domains are also different, please refer to the picture notes)

For notes and instructions on the test points, please see the following articles:


Click to view: Fix Description of Antminer Hashboard test points

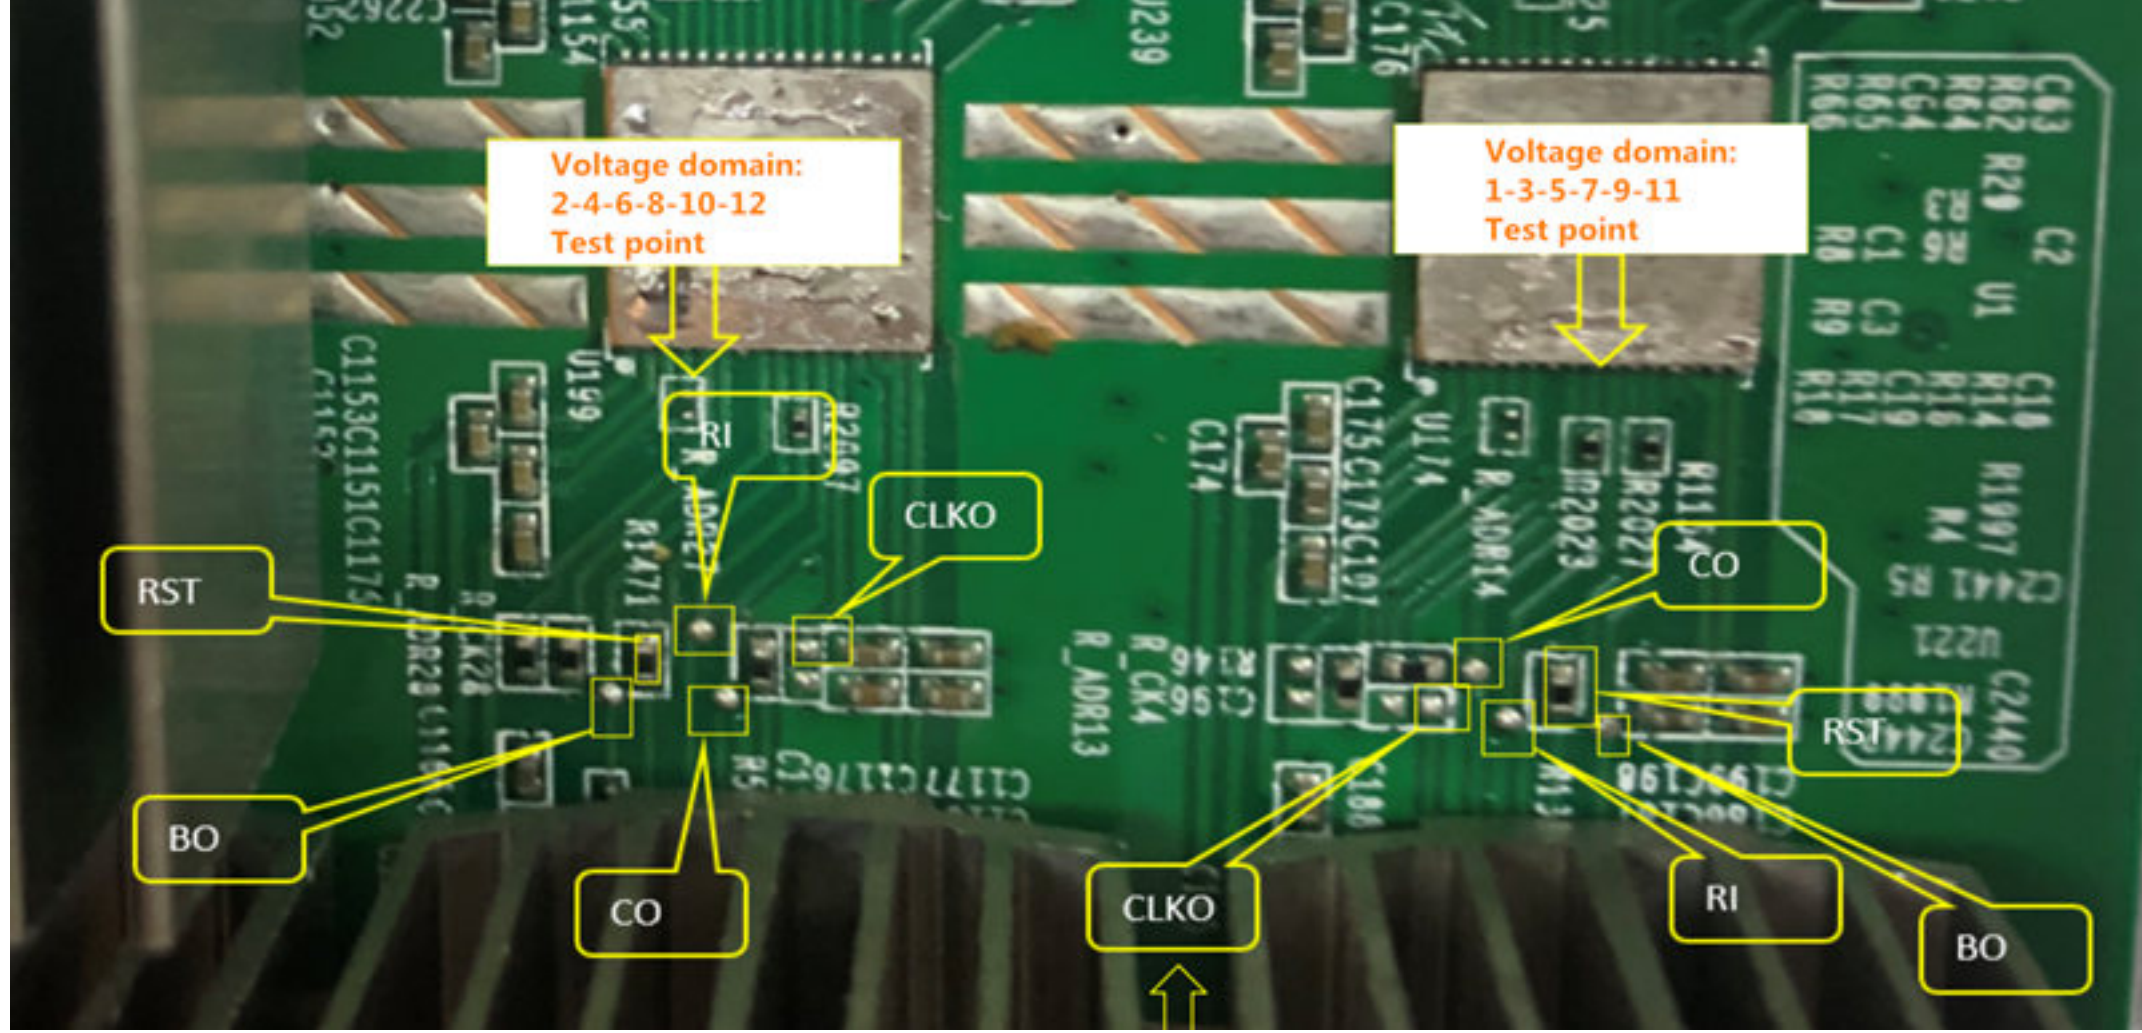


CLK - CO - BO - RST is sequential transmission, RI is reverse transmission

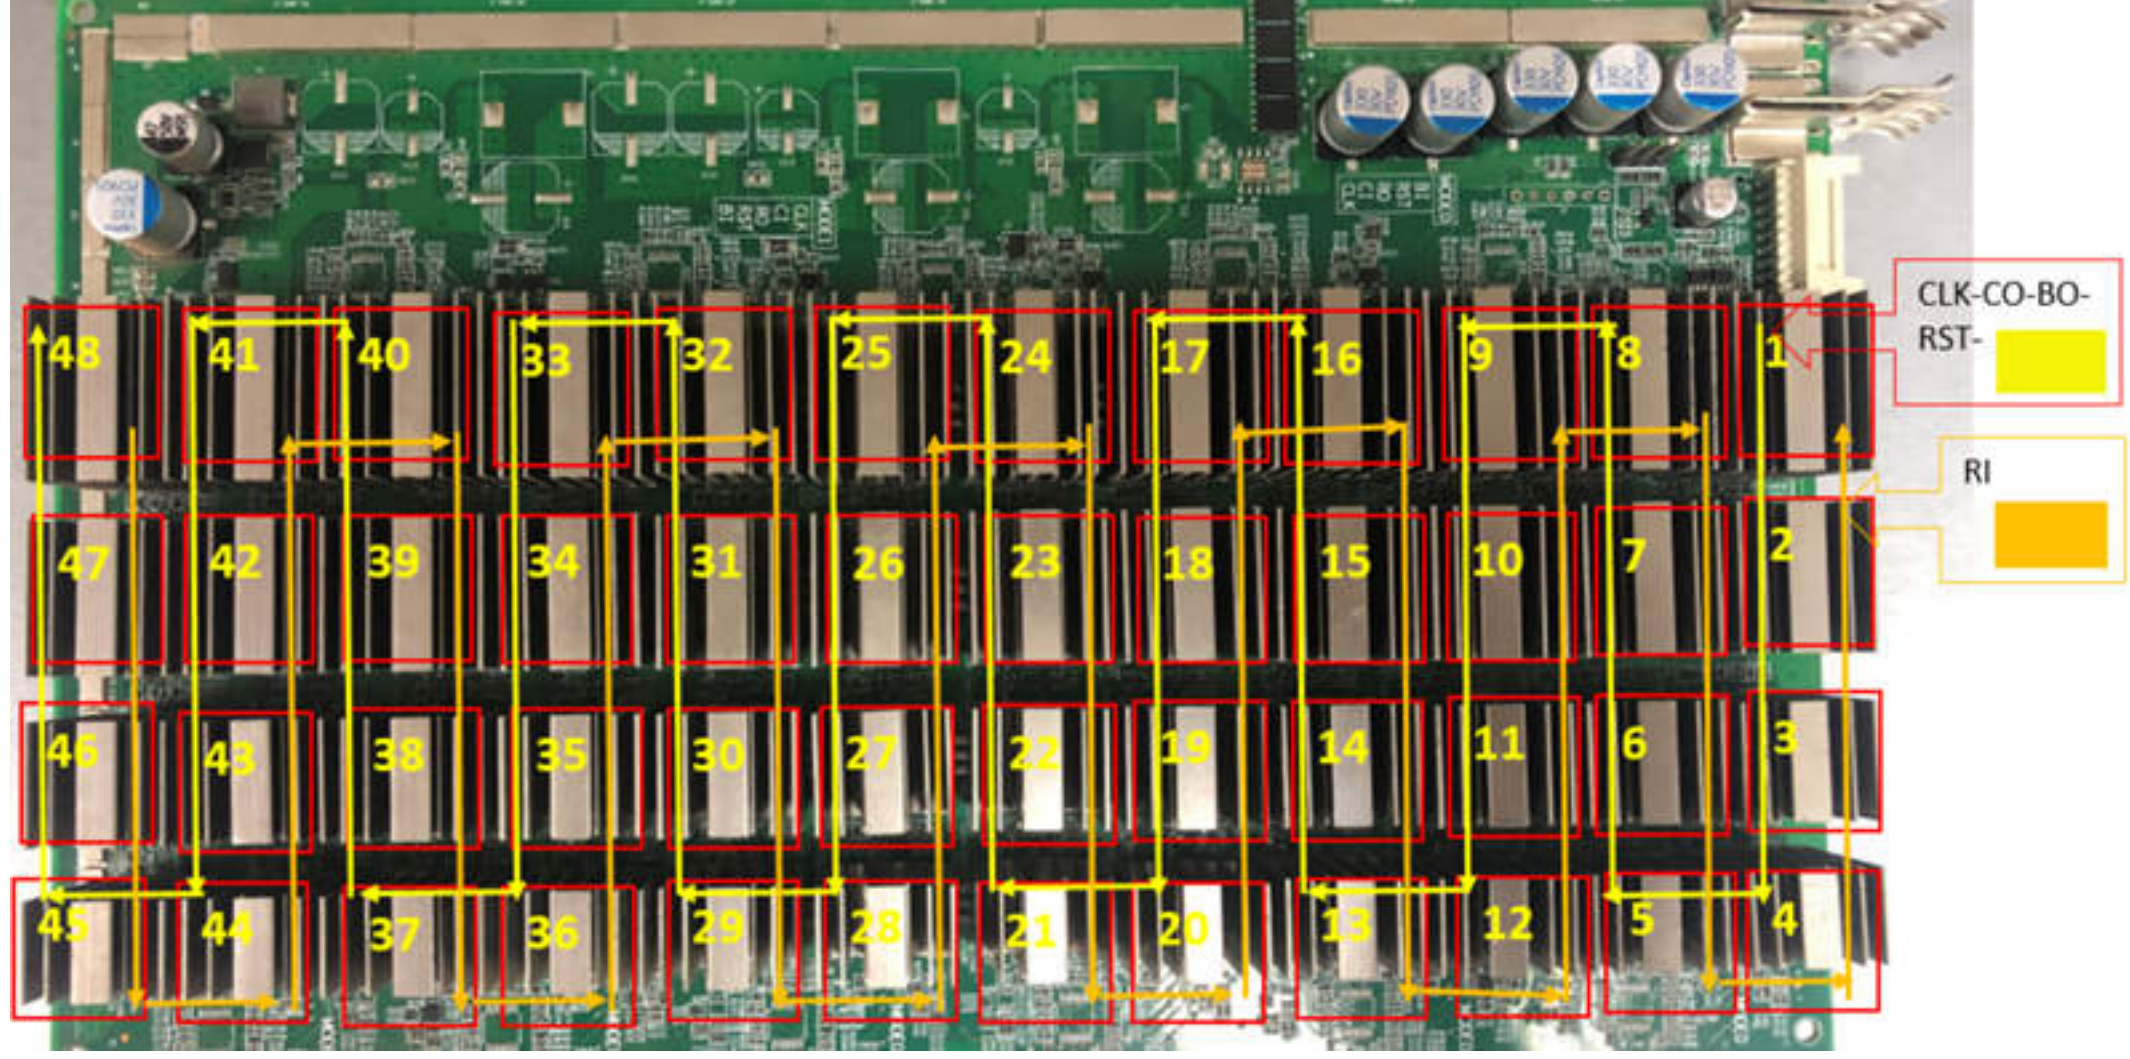

48 chips are divided into 12 voltage domains, and each voltage domain contains 4 chips

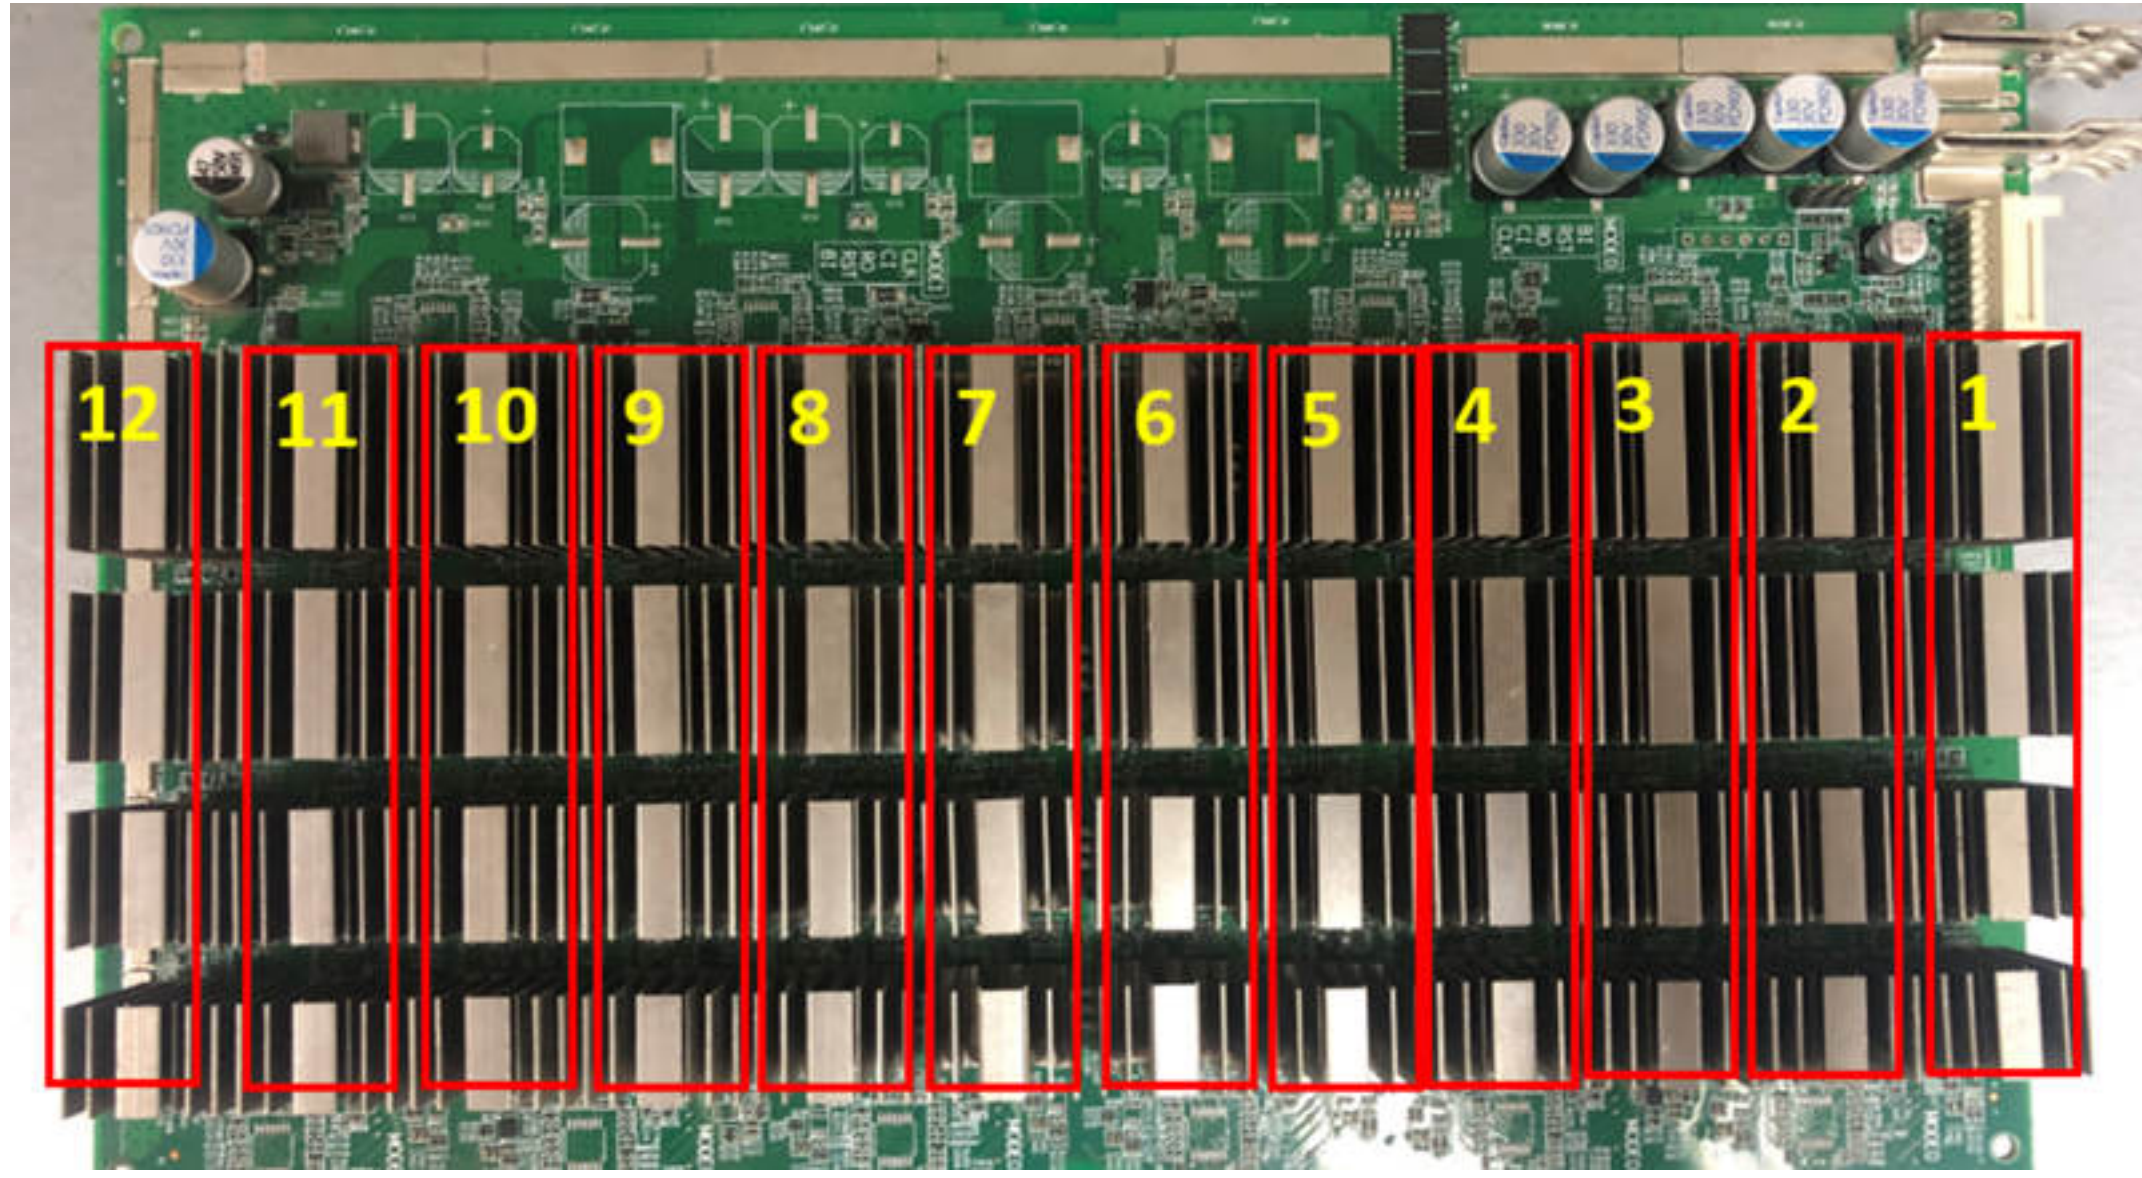

We provide some related circuit schematics

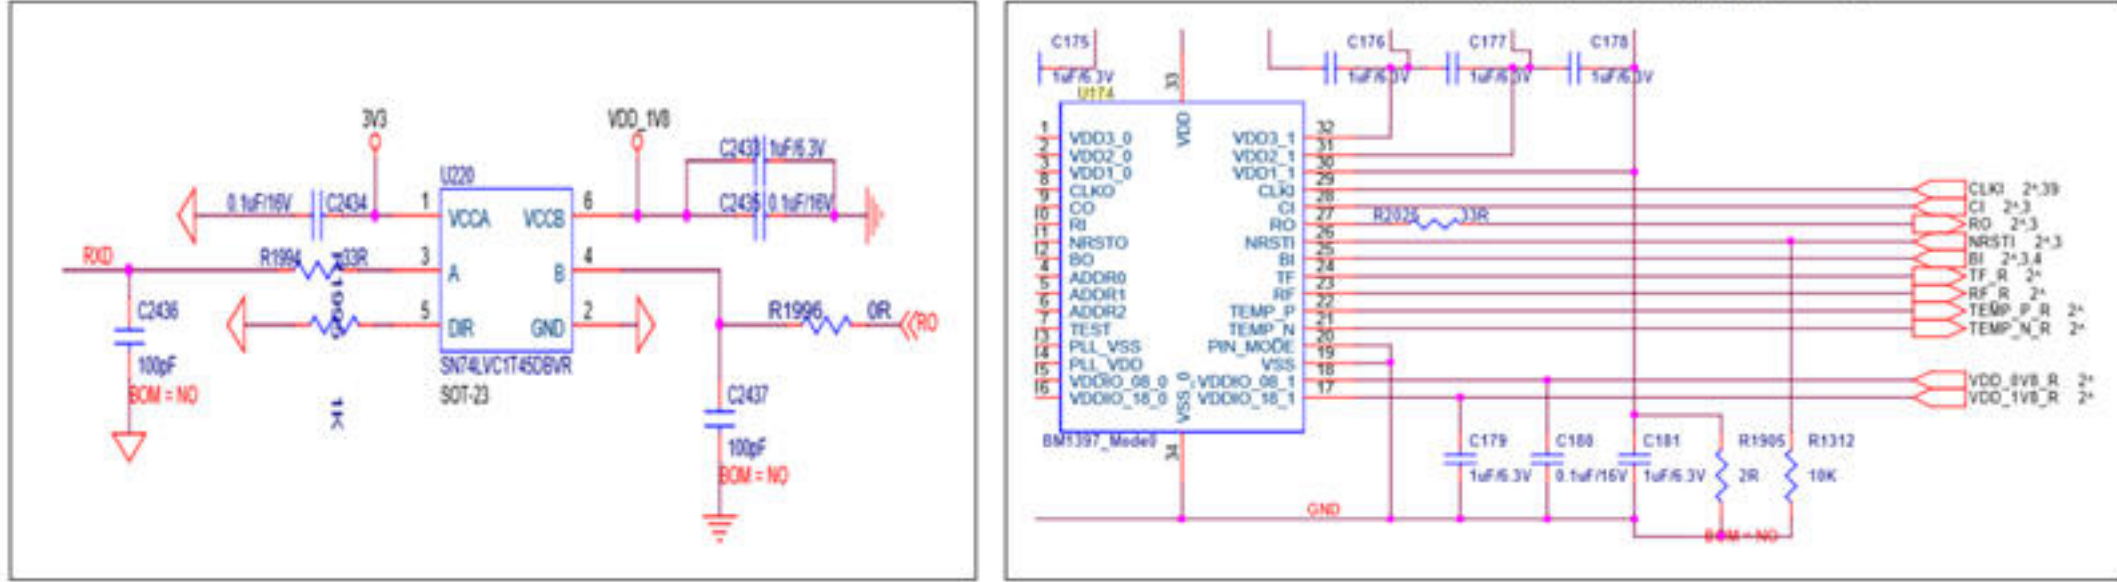

Antminer S17 hash board repair guide download address:

click to download: Antminer S17 Hash Board Repair Guide

Video tutorial for Hashboard inspection and repair, example model: S9

(The detection and repair methods of most miners in Antminer are basically the same)

Click to watch:AntminerS9 hash board repair and fault diagnosis video tutorial.

Related maintenance tools:

BM1397AD S17, S17pro chip


Multi-function test fixture

Chip Tin Tool

Click to see more miner maintenance tools

NOTICE

This is an original piece, Reproduction in whole or part without written permission is prohibited.

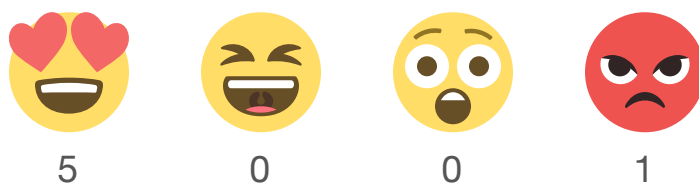

Search...

Articles in this section

How to replace the temperature file when we use Antminer test fixture to test the S9 hash board?

Antminer apw9 apw9+ repair guide

Antminer S11 manual download

Antminer T17 Manual Download

Whatsminer M20S Manual Downlaod

Antminer T17e Manual Download

Antminer T17+ Manual Download

Antminer S17e Manual Download

Antminer S17+ Manual Download

Antminer T17 overclocking firmware

Antminer S17pro overclocking firmware at BTC.com

Antminer S17 overclocking firmware at BTC.com

Innosilicon Manual Download

Whatsminer M10 Manual Download

Antminer L3+ Manual Download



ABOUT

About Us
Privacy Policy
Terms of Service
Contact Us

PRODUCTS

New ASIC Miner
Used ASIC Miner
Repair Parts Tools
Integrated Circuit

SUPPORT

Repair Tutorials
Files Download
ASIC Miner Manuals
Repair Center

INFO

Payment Method
News
FAQ
Blog

Follow us on social



Emails

